

Roll Up Curtain

Pull Chord Style


Installation Instructions



 **WARNING**

Allow the curtain(s) to reach room temperature (above 50°F/10°C) before unfolding. Unfolding at too Low of Temperatures Can Cause Cracks or Damage. This Damage is Not Covered Under Steel Guard Safety's Warranty



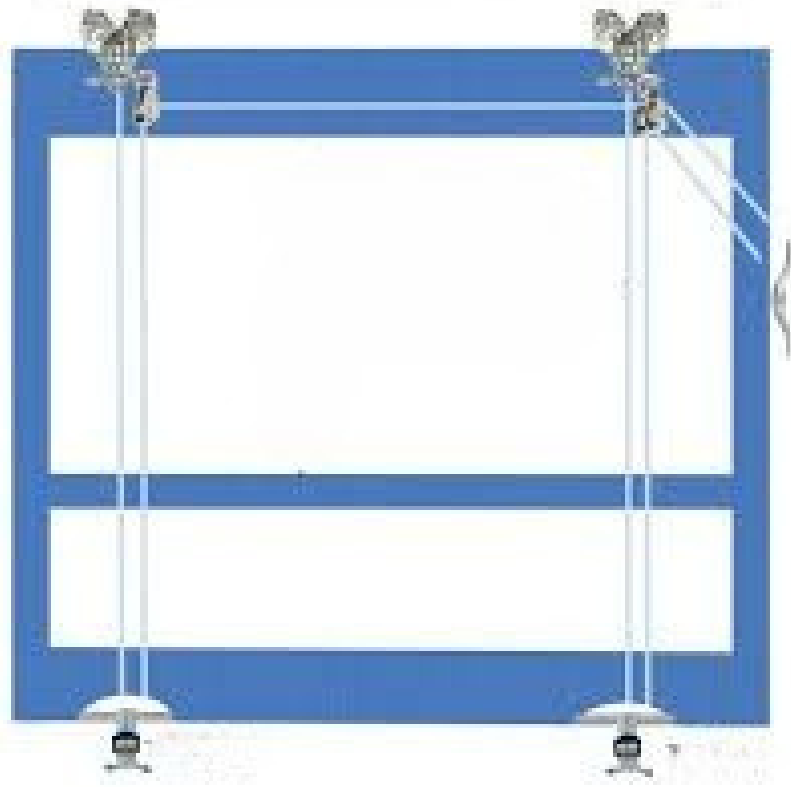

HARDWARE

Head Rod Clamps



Porcelain Ring



Pulley (Optional)



Clip Porcelain Ring



Curtain



Cleat



Bottom Roll Bar & Caps



Rope -Qty 1



Top Roll Stabilizer Bar



Not Included

Fasteners are not included due to the wide variety of surfaces

Optional | Anchor straps + plates




Optional | Velcro-Qty Varies



INSTRUCTIONS

Step 1 - Open the Curtain and Mark & Drill Head Rod Clamps Mount

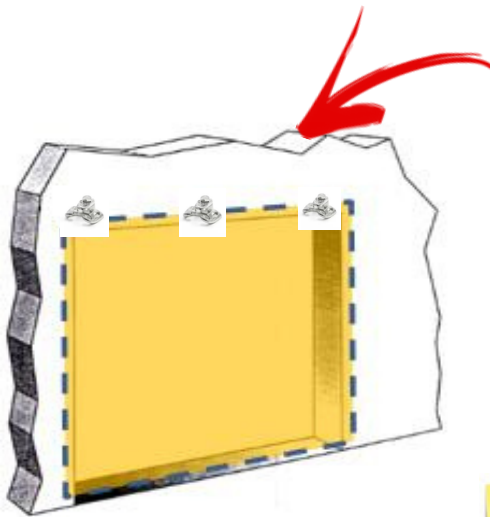

A-Unfold the curtain once at Room Temperature

B- Mark the Holes Where the Head Rod Clamps are Mounting. They Should Mount about 2-3 inches From the Ends, and Average About 3-4 feet Every Head Rod Clamp (Will be Predetermined)

C - With a Drill, Drill the Pilot Holes for the Head Rod Clamps

Tip!

Keep the bottom of the shade about 1/2" from the ground. If it is resting on the ground friction will wear a hold in the shade.

Step 2 -Slide the Top Bar in the Top Pocket



A - Lay the Curtain Out Flat and Slide the Top Stabilizer Bar in the Top Pocket

Step 2 - Anchor the Head Rod Clamps



A -Using the Proper Screw/Anchor, Mount the Head Rod Clamps in there Pilot Hole Positions

B -After all the Head Rod Clamps are Mounted, Loosen the Grip to as Loose as Possible to Fit the Curtain in.

Step 3 - Tie the Ropes to the Head Rod Clamps



A -Take the Longest Rope and Tie it to the Opposite End Where the Cleat and Tie Off Side is to Be. Tie to the Loop in the Head Rod Clamp like a hitch, bowline, or other secure knots.

B -Take the Short Ropes provided and Tie them the Same Way.

Step 4 - Hang the Curtain on the Head Rod Clamps



A -Take the Curtain with the Top Bar in it and with one (or sometimes to people) and a ladder(s) take the top bar in the open Head Rod Clamp and Position them Properly. MAKE SURE THE ROPE IS BEHIND THE CURTAIN

B -Next Tighten the Wing Nuts to Grip but Not Too Tight

Step 5 - Hang the Curtain on the Head Rod Clamps



A



A -Take the Porcelain Ring and Clips(A) or the Pulleys (B) and Attach Them to the Clip on Every Head Rod Clamp

B



B -If you are Using Pulleys the Double Pulley is to Attach to the Side Closest to the Cleat and Tie Off Point

Step 6- Insert the Bottom Roller Bar



A - Tak Slide the Bottom Roller Bar in the Bottom Packet

B - Take the 2 End Caps and Seal the Right and Left Side of the Roller Bar

Step 7- Mount the Cleat




A Take the Cleat and Position it about 4 ft high and within 1ft of the side of the curtain. Mark the Mounting Holes

B -Take A Drill and Make the Pilot Holes

C - Mount the Cleat on the Wall



Step 8- Drape the Rope Through the Rings or Pulleys

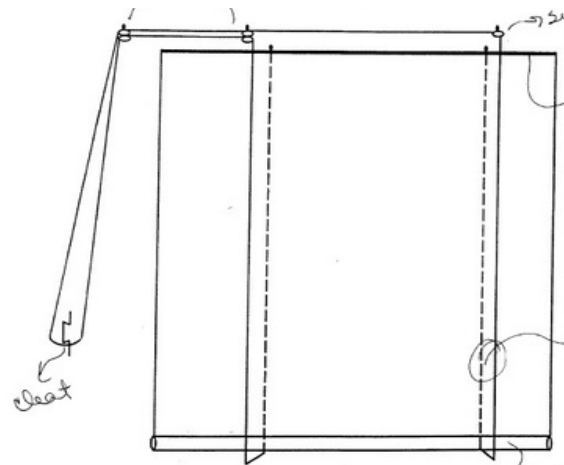

A Take the Rope Furthest Away from the Cleat and Drape it from the Back Under the Bottom Roll Bar Up to the Ring /Pulley and Drape Through. Stop.

B - Take the Next Rope Down the Line and Drape it from the Back Under the Bottom Roll Bar Up to the Next Ring/Pulley and Drape Through. Stop

C - Take the First Rope and and Take it Through the Second Ring / Pulley and Drape Through

D - If there is More Than tow Rings/Pulleys You will need to Repeat the Steps A to C again to Reach the End of the Curtain . (Diag

The Ropes from the Head Rod Clamp / Pulley System Meet Together at the End to Tie Off at the Cleat When the Curtain is Ralled Up

Step 9 -Tighten the Ropes

Remove slack from the ropes to be snug at the bottom of the pipe.




Step 11 -Trim the Rope

Make sure curtain is all the way rolled down. Put a little tension/pressure on the center of the bottom pipe. Tighten ropes together without actually raising the curtain.

First -Trim the ropes to be about twelve inches longer/past the cleat, tie the ropes together in a stopper knot about six inches below the cleat

Second -Gently pull down on curtain from center to make it tight/take up the slack.

OPTIONAL-Anchor Straps

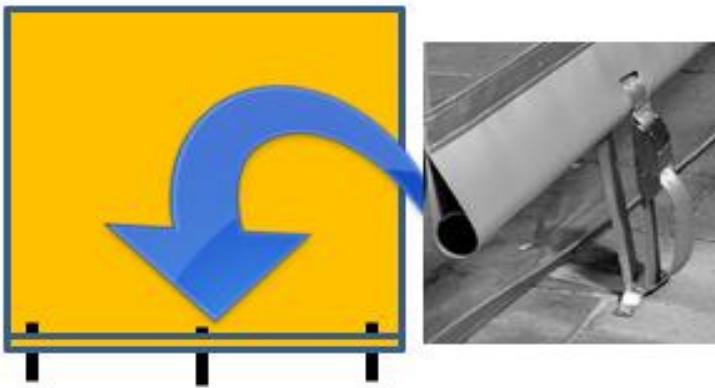

If you have anchor straps as part of your kit please see below.

Step 1 -with a pencil mark where you want the anchors placed on the bottom of the shade. Generally you will have three so about 1' in from each end and one in the middle.

Step 2 -Using a utility knife make a horizontal slit just wide enough for the strap to fit through. Make the slit as tight to the top of the pipe as you can. When the wind blows you want it pulling on the pipe and not the shade.

Step 3 -Install the strap around the pipe and through the hole.

Step 4 -With the straps now dangling on the ground anchor in your anchor plates

Step 5 -Loop the straps through the D-rings on the anchor plates.

OPTIONAL-Side Seal Velcro



Note -Wall must be perfectly clean and dry before attaching Velcro

Step 1 -Roll up the curtain so that it is out of the way.

Step 2 -Stick the Velcro to the wall where the curtains sewn on Velcro will line up with it.

Step 3 -With light pressure, lower and swing curtain back into place and allow Velcro adhesive to attach to the wall

Step 4 -Press down along the curtain hems to ensure adhesive has contact to wall.

Tip!

Note -Most customer choose to use a small washer and bolt to pinch the Velcro to the wall to make it last longer. This is also ideal for dirty walls where the velcro won't stick.

